

# PLS180 Palm Laser® Green Beam




## PACIFIC LASER SYSTEMS

The Professional Standard

#### **FEATURES**



#### **MENU SWITCH**



PRESS " $\mathbf{ON}$ " TO SCROLL THROUGH THE MENU. THE NUMBERS INDICATE MENU FUNCTIONS:

- 1. LEVEL/HORIZONTAL BEAM / GREEN LED
- 2. PLUMB/VERTICAL BEAM / GREEN LED
- 3. BOTH BEAMS SELF-LEVELING / GREEN LED
- 4. BOTH BEAMS FIXED / RED LED
- 5 OFF
- UNLESS THE PLS180 G IS ON NUMBER 4 MODE, UNIT WILL NOT OPERATE IF TILT EXCEEDS 6° OUT OF LEVEL.
- AMBER LED = LOW BATTERY
- PLS180 G MENU SAME AS ABOVE. PRESS "PULSE ON"
  BUTTON TO ACTIVATE PULSED BEAM TO USE OUTDOORS WITH PLS SLD G LASER DETECTOR.
- FLASHING LED INDICATES LASER IS PULSING AND CAN BE USED WITH PLS SLD G LASER DETECTOR.
- PULSED BEAM WILL BE LESS BRIGHT THAN NON-PULSED BEAM.

### SAFETY LABELING

CAUTION: USE OF CONTROLS, ADJUST-MENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

WARNING LABEL



#### ID# CERTIFICATION LABEL

GLOBALLY SOURCED. FINAL ASSEMBLY IN U.S.A.
PATENT #6,930,380 1-800-661-4600
PLS 2550 KERNER BLVD., SAN RAFAEL, CA 94901
DATE:

S/N:

#### CLASS 2 LASER PRODUCT

PLS180 COMPLIES WITH FDA. STDS. 21. CFR., CHAP. J 1040.10 & 11 EXCEPT FOR DEVIATION PURSUANT TO LASER NOTICE .60 OF 7/26/2006

PLS180 complies with US FDA standards, 21 CFR, Subchapter J.

These labels are attached to every PLS laser. These are not to be removed or defaced

PLS • 2550 KERNER BLVD., SAN RAFAEL, CA 94901 8 0 0 6 0 1 4 5 0 0



I ABFI

AVOID EXPOSURE

LASER RADIATION

EMITTED FROM

THIS APERTURE

**BACK** 

RECURSION.

MAN WHEN

FRONT

#### **CHECK LEVEL**

We recommend that you check your PLS180 periodically in order to assure its accuracy.


#### TO CHECK LEVEL:

Choose two interior walls approximately 15'-0" apart (see Fig. 1). You can use 2 x 4s for targets.

Turn on the PLS180 to setting #1 (level). With the PLS180 six inches away from and facing target #1, carefully mark the center of the line. Label this mark A1. Swivel the laser 180° and mark the center of the line on target #2. Label this mark B1.

Move the PLS180 six inches away from and facing target #2. Carefully mark the center of the line. Label this mark B2. Swivel the laser 180° and mark the center of the line on target #1. Label this mark A2.


You now have two centers of elevation at each target. Carefully measure the distance between centers of each set of marks. If there is a difference, subtract one measurement from the other. This calibration method magnifies any error by a factor of two. Therefore divide any difference by two to find the true error Your PI \$180 should have an error of no greater than 1/8in. within 30ft.



#### **CHECK PLUMB**

Choose a door jamb with 8'-0" clear on each side of the door. Turn on your PLS180 laser to setting #2 (plumb). With your laser at point A, make two marks on the floor: the first at 8'-0" from point A centered on door header above (mark this point B), the second 16'-0" from point A (mark this point C). Without moving the laser, make a third mark on the door header (mark this point D).

Move the laser to point C, exactly align the beam with point B, and notice where the beam falls at point D. If it is within a "light" 1/16" of point D, the laser is in calibration

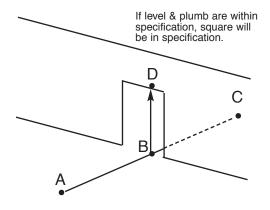

#### WARRANTY

This product is warranted by PLS • Pacific Laser Systems to the original purchaser to be free from defects in material and workmanship under normal use for a period of three years (USA only) from the date of purchase. During the warranty period, and upon proof of purchase, the product will be repaired or replaced (with the same or similar model at our option), without charge for either parts or labor, through PLS. The purchaser shall bear all shipping, packing and insurance costs. Upon completion of the repair or replacement, the unit will be returned to the customer. freight prepaid. The warranty will not apply to this product if it has been misused, abused or altered. Without limiting the foregoing, battery leakage, dents or gouges to the plastic housing, broken optic windows, damage to the switch/LED membrane are presumed to result from misuse or abuse. Tampering with or removal of the caution or certification labels voids this warranty.

Neither this warranty nor any other warranty, express or implied, including implied warranties of merchantability, shall extend beyond the warranty period. No responsibility is assumed for any incidental or consequential damages. This warranty gives you specific legal rights, and you may have other rights which vary from state to state

#### **SPECIFICATIONS**

Semiconductor laser diode

Light source: 510-530 nm. visible Working range: +/- 100 feet Accuracy: <1/8" @ 30 feet (<3mm @ 10 meters) Levelina: Automatic Leveling range +/- 6° Power supply: 3AA batteries

alkaline or rechargeable Operating time: 6 hours continuous use with

single beam: 2 hours both

beams

0° F to 122° F Operating temp: (-18° C to 50° C) -40 F to 158° F Storage temp (-40° C to 70° C)

Green light: ON Indicator:

Red light: EXCEEDS TILT/ TILT OVERBIDE #4

Amber light: BATTERY LOW Environment: Water resistant; not submersible

Dimensions: 2" x 2-7/8" x 3-3/8"

Weight:

10 oz.(.28kg) (including batteries)

FAN ANGLE 180°+

