



PLS180 Palm Laser®

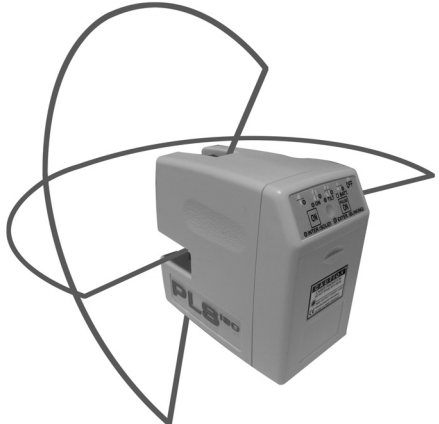

PACIFIC LASER SYSTEMS


The Professional Standard

FEATURES

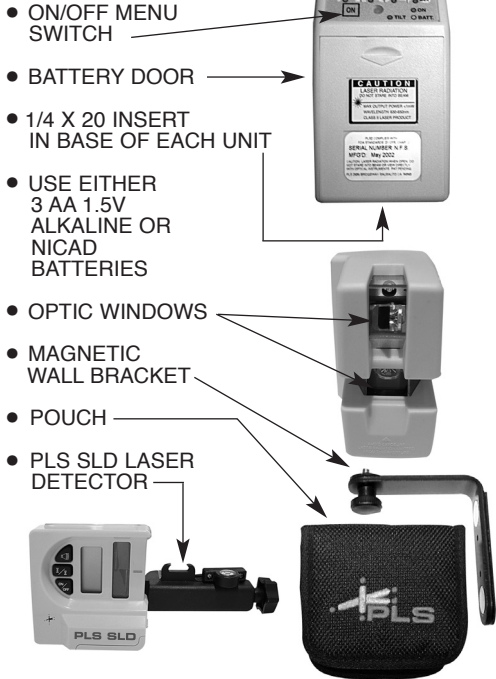- ON/OFF MENU SWITCH
 - BATTERY DOOR
 - 1/4 X 20 INSERT IN BASE OF EACH UNIT
 - USE EITHER 3 AA 1.5V ALKALINE OR NICAD BATTERIES
 - OPTIC WINDOWS
 - MAGNETIC WALL BRACKET
 - POUCH
 - PLS SLD LASER DETECTOR
- 

PLS180 and PALM LASER are registered trademarks of PLS • PACIFIC LASER SYSTEMS
PLS180 Patent Pending

MENU SWITCH

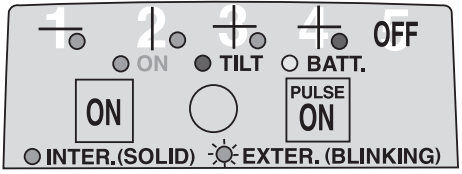

PRESS "ON" TO SCROLL THROUGH THE MENU. THE NUMBERS INDICATE MENU FUNCTIONS:

1. LEVEL/HORIZONTAL BEAM / GREEN LED
2. PLUMB/VERTICAL BEAM / GREEN LED
3. BOTH BEAMS - SELF-LEVELING/ GREEN LED
4. BOTH BEAMS - FIXED/RED LED
5. OFF

• UNLESS THE PLS180 IS ON NUMBER 4 MODE, UNIT WILL NOT OPERATE IF TILT EXCEEDS 6° OUT OF LEVEL.

• AMBER LED = LOW BATTERY

• PLS180 MENU SAME AS ABOVE. PRESS "PULSE ON" BUTTON TO ACTIVATE PULSED BEAM TO USE OUTDOORS WITH PLS SLD LASER DETECTOR.

• FLASHING LED INDICATES LASER IS PULSING AND CAN BE USED WITH PLS SLD LASER DETECTOR.

• PULSED BEAM WILL BE LESS BRIGHT THAN NON-PULSED BEAM.

SAFETY LABELING


CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

WARNING LABEL

CAUTION

LASER RADIATION

DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS



MAX OUTPUT POWER <1mW
WAVELENGTH 635-670nm
CLASS II LASER PRODUCT

ID# CERTIFICATION LABEL

PLS180 COMPLIES WITH FDA PERFORMANCE STDS. 21 CFR, SUBCHAPTER J

SERIAL NUMBER:
MFG'D:

CAUTION: LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. PATENT PENDING
REG. US PATENT OFFICE
PLS 2550 KERNER BLVD., CA 94901

PLS180 complies with US FDA standards, 21 CFR, Subchapter J.

Except for external cleaning there is nothing the owner needs to do to maintain this product.

These labels are attached to every PLS laser. These are not to be removed or defaced.

PLS • 2550 KERNER BLVD., SAN RAFAEL, CA 94901
800 601 4500



AVOID EXPOSURE LASER RADIATION EMITTED FROM THIS APERTURE



CHECK LEVEL

We recommend that you check your PLS180 periodically in order to assure its accuracy.


TO CHECK LEVEL:

Choose two interior walls approximately 15'-0" apart (see Fig. 1). You can use 2 x 4s for targets.

Turn on the PLS180 to setting #1 (level). With the PLS180 six inches away from and facing target #1, carefully mark the center of the line. Label this mark A1. Swivel the laser 180° and mark the center of the line on target #2. Label this mark B1.

Move the PLS180 six inches away from and facing target #2. Carefully mark the center of the line. Label this mark B2. Swivel the laser 180° and mark the center of the line on target #1. Label this mark A2.


You now have two centers of elevation at each target. Carefully measure the distance between centers of each set of marks. If there is a difference, subtract one measurement from the other. This calibration method magnifies any error by a factor of two. Therefore divide any difference by two to find the true error. Your PLS180 should have an error of no greater than 1/8in. within 30ft.

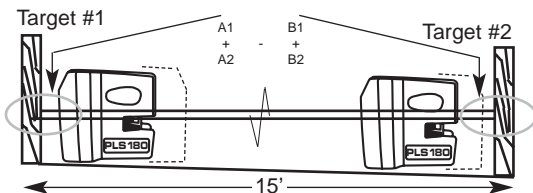

CHECK PLUMB

Choose a door jamb with 8'-0" clear on each side of the door. Turn on your PLS180 laser to setting #2 (plumb). With your laser at point A, make two marks on the floor: the first at 8'-0" from point A centered on door header above (mark this point B), the second 16'-0" from point A (mark this point C). Without moving the laser, make a third mark on the door header (mark this point D).

Move the laser to point C, exactly align the beam with point B, and notice where the beam falls at point D. If it is within a "light" 1/16" of point D, the laser is in calibration.

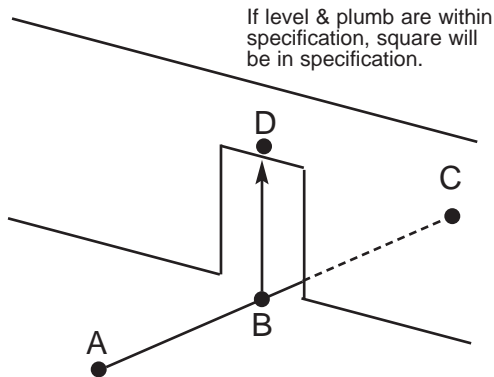

WARRANTY

This product is warranted by PLS • Pacific Laser Systems to the original purchaser to be free from defects in material and workmanship under normal use for a period of one year from the date of purchase. During the warranty period, and upon proof of purchase, the product will be repaired or replaced (with the same or similar model at our option), without charge for either parts or labor, through PLS. The purchaser shall bear all shipping, packing and insurance costs. Upon completion of the repair or replacement, the unit will be returned to the customer, freight prepaid. The warranty will not apply to this product if it has been misused, abused or altered. Without limiting the foregoing, battery leakage, dents or gouges to the plastic housing, broken optic windows, damage to the switch/LED membrane are presumed to result from misuse or abuse. Tampering with or removal of the caution or certification labels voids this warranty.

Neither this warranty nor any other warranty, express or implied, including implied warranties of merchantability, shall extend beyond the warranty period. No responsibility is assumed for any incidental or consequential damages. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



PLS Lab Technicians

SPECIFICATIONS

Light source:	Semiconductor laser diode 635-670 nm, visible
Working range:	+/- 100 feet (outdoor w/detector)
Accuracy:	<1/8" @ 30 feet (outdoor w/detector) (<3mm @ 10 meters)
Leveling:	Automatic
Leveling range:	+/- 6°
Power supply:	3AA batteries alkaline or rechargeable
Operating time:	+25 hours continuous use with single beam; 12.5 hours both beams
Operating temp:	0° F to 122° F (-18° C to 50° C)
Storage temp:	-40 F to 158° F (-40° C to 70° C)
Indicator:	Green light: ON Red light: EXCEEDS TILT/ TILT OVERRIDE #4 Amber light: BATTERY LOW Flashing: pulse beam-PLS180
Environment:	Water resistant; not submersible
Dimensions:	2" x 2-7/8" x 3-3/8"
Weight:	10 oz. (.28kg) (including batteries)

FAN ANGLE 180° +

